

**SPECIFICATION** 




- Features :• Universal AC input / Full range
- · AC input active surge current limiting
- Built-in 5V/0.5A auxiliary power
- Built-in active PFC function, PF>0.95
- Protections: Short circuit / Overload / Over voltage / Over temperature
- Output voltage can be trimmed between 40 ~ 110% of the rated output voltage
- Forced air cooling by built-in DC fan
- High power density 10.7w/inch³
- 1U low profile 41mm
- Active current sharing up to 4000 W(3+1) (Note.8)
- DC OK Signal
- Built-in remote ON-OFF control
- Built-in remote sense function
- 5 years warranty



MODEL		RSP-1000-12	RSP-1000-15	RSP-1000-24	RSP-1000-27	RSP-1000-48		
	DC VOLTAGE	12V	15V	24V	27V	48V		
ОИТРИТ	RATED CURRENT	60A	50A	40A	37A	21A		
	CURRENT RANGE	0 ~ 60A	0~50A	0 ~ 40A	0~37A	0~21A		
	RATED POWER	720W	750W	960W	999W	1008W		
	RIPPLE & NOISE (max.) Note.2	150mVp-p	150mVp-p	150mVp-p	150mVp-p	150mVp-p		
	VOLTAGE ADJ. RANGE	10 ~ 13.5V	13.5 ~ 16.5V	20 ~ 26.4V	24 ~ 30V	43 ~ 55V		
	VOLTAGE TOLERANCE Note.3	±1.0%	±1.0%	±1.0%	±1.0%	±1.0%		
	LINE REGULATION	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%		
	LOAD REGULATION	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%		
	SETUP, RISE TIME	300 ms, 50 ms at full load						
	HOLD UP TIME (Typ.)	16ms/230VAC 16ms/115VAC at full load						
	VOLTAGE RANGE Note.5	90 ~ 264VAC 127 ~	370VDC					
	FREQUENCY RANGE	47 ~ 63Hz						
	POWER FACTOR (Typ.)	0.95/230VAC 0.98/	115VAC at full load					
INPUT	EFFICIENCY (Typ.)	83%	85%	88%	88%	90%		
	AC CURRENT (Typ.)	12A/115VAC 6A/230VAC						
	INRUSH CURRENT (Typ.)	25A/115VAC 40A/230VAC						
	LE AKAGE CURRENT	<2.0mA / 240VAC						
		105 ~ 125% rated output	power					
	OVERLOAD	Protection type: Constant current limiting, recovers automatically after fault condition is removed						
	OVER VOLTAGE	13.8 ~ 16.8V	17 ~ 20.5V	27.6 ~ 32.4V	31 ~ 36.5V	56.6 ~ 66.2V		
PROTECTION		Protection type : Shut do	wn o/p voltage, re-power	on to recover				
	OVER TEMPERATURE	85°C ±5°C (TSW2) detect on heatsink of O/P diode; 75°C ±5°C (TSW1) detect on heatsink of power transistor						
		Protection type: Shut down o/p voltage, recovers automatically after temperature goes down						
	AUXILIARY POWER(AUX)	5V @ 0.5A (+5%, -8%)						
	REMOTE ON/OFF CONTROL Note.6							
FUNCTION	DC OK SIGNAL	The TTL signal out, PSU turn on = 0 ~ 1V; PSU turn off = 3.3 ~ 5.6V						
	OUTPUT VOLTAGE TRIM Note.6	Adjustment of output voltage is possible between 40 ~ 110% of rated output						
	CURRENT SHARING(CS)Note.7	Please refer to function manual						
	WORKING TEMP.	-20 ~ +60°C (Refer to "Derating Curve")						
	WORKING HUMIDITY	20 ~ 90% RH non-condensing						
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C , 10 ~ 95% RH						
	TEMP. COEFFICIENT	±0.02%/°C (0 ~ 50°C)						
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes						
	SAFETY STANDARDS	UL60950-1, TUV EN60950-1 approved						
SAFETY&	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:0.5KVAC						
EMC	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:	100M Ohms / 500VDC / 2	5°C / 70% RH				
(Note 4)	EMC EMISSION	Compliance to EN55022 (CISPR22), EN61000-3-2,-3						
	EMC IMMUNITY	Compliance to EN61000-4-2,3,4,5,6,8,11, EN55024, EN61000-6-2, EN61204-3, heavy industry level, criteria A						
	MTBF	116.75K hrs min. MIL-HDBK-217F (25°C)						
OTHERS	DIMENSION	295*127*41mm (L*W*H)						
	PACKING		1.95Kg; 6pcs/12.7Kg/1.15CUFT					
NOTE	1. All parameters NOT specia	lly mentioned are measur	ed at 230VAC input, rat					
	2. Ripple & noise are measure	ed at 20MHz of bandwidtl	n by using a 12" twisted and load regulation.	pair-wire terminated w	rith a 0.1uf & 47uf paralle	capacitor.		

- 4. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on http://www.meanwell.com)
- 5. Derating may be needed under low input voltages. Please check the derating curve for more details.
- The power supply unit will have no output if the shorting connector is not assembled. It contains two shorting wires: one is from on/off(pin6) to -s(pin2) and the other is from Vco(pin8) to Vca(pin10). Please refter to function manual for details.
   In parallel connection, maybe only one unit operate if the total output load is less than 5% of rated load condition.
- 8. Please consult MEAN WELL for applications of more units connecting in parallel.



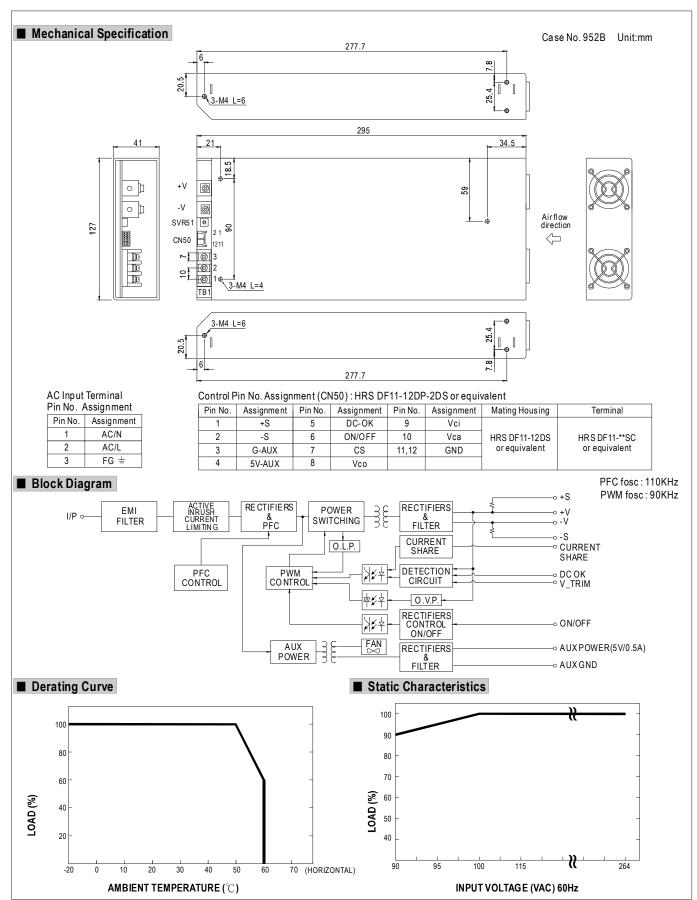




# ■ Function Description of CN50

Pin No.	Function	Description
1	+S	Positive sensing. The +S signal should be connected to the positive terminal of the load. The +S and -S leads should be twisted in pair to minimize noise pick-up effect. The maximum line drop compensation is 0.5V.
2		Negative sensing. The -S signal should be connected to the negative terminal of the load. The -S and +S leads should be twisted in pair to minimize noise pick-up effect. The maximum line drop compensation is 0.5V.
3	G-AUX	Auxiliary voltage output ground. The signal return is isolated from the output terminals (+V & -V).
4		Auxiliary voltage output, 4.6~5.25V, referenced to pin 3(G-AUX). The maximum load current is 0.5A. This output has the built-in oring diodes and is not controlled by the "remote ON/OFF control".
5	DC_OK	Open collector signal, referenced to pin11,12(GND). Low when PSU turns on. The maximum sink current is 10mA and the maximum external voltage is 5.6V.
6	ON/OFF	Turns the output on and off by electrical or dry contact between pin 6 ( ON/OFF) and pin 2 (-S). Short: Power ON, Open: Power OFF.
7	CS	Current sharing signal. When units are connected in parallel, the CS pins of the units should be connected to allow current balance between units.
8	Vco	Short connecting between Vco (pin8) and Vca (pin10) if output voltage trim function is not used.
9	Vci	Connect to external DC voltage source for output voltage triming, referenced to pin 2 (-S). Output voltage can be trimmed between 40 ~ 110% of the rated output voltage.
10	Vca	Connect to external resistor (1/8W) for output voltage triming. Output voltage can be trimmed between 40 ~ 110% of the rated output voltage. Please refer to function manual for details.
11,12	GND	These pins connect to the negative terminal (-V). Return for DC_OK Signal output.

## ■ Function Manual

## 1."Remote ON/OFF" and "Output voltage trim" functions are not used.

The power supply unit will have no output if the shorting connector (accessory comes along with the PSU) is not assembled. It contains two shorting wires: one is from ON/OFF (pin6) to -S (pin2) and the other is from Vco (pin8) to Vca (pin10).

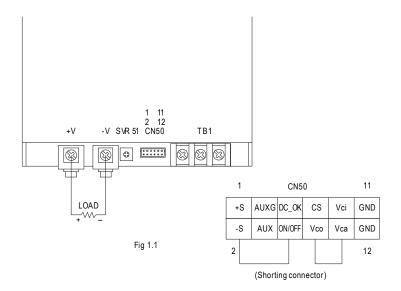




#### 2.Remote ON/OFF

The PSU can be turned ON/OFF by using the "Remote ON/OFF" function  $% \left( \frac{1}{2}\right) =\frac{1}{2}\left( \frac{1}{2}\right) =\frac{1}{2}\left$ 

Between ON/OFF(pin6) and -S(pin2)	Output Status
SW ON (Short)	ON
SW OFF (Open)	OFF

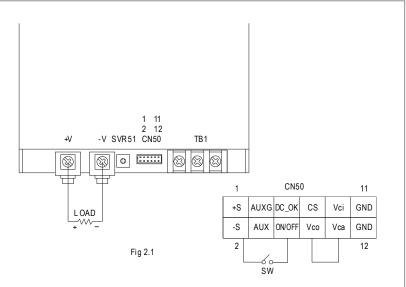

## 3.DC\_OK signal

"DC\_OK" is an open collector signal.

It indicates the output status of the PSU. It can operate in two ways: One is sinking current from external TTL signal; the other is sending out a TTL voltage signal.

#### 3-1 Sink current:

The maximum sink current is 10mA and the maximum external voltage is  $5.6\,\text{V}.$ 

## 3-2 TTL voltage signal:

Between DC-OK(pin5) and GND(pin11&12)	Output Status
0~1V	ON
3.3 ~ 5.6V	OFF

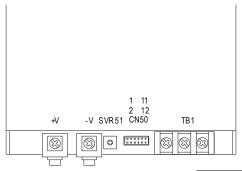


Fig 3.1

1 CN50 11


+S AUXG DC\_OK CS Vci GND

-S AUX ONOFF Vco Vca GND

2 12

### 4.Remote Sense


The remote sensing compensates voltage drop on the load wiring up to 0.5 V.

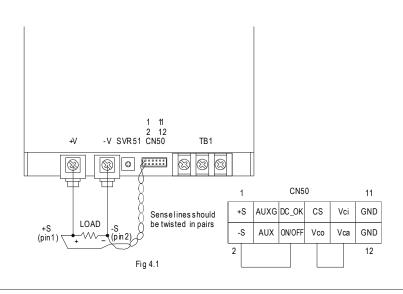





## 5.Output Voltage TRIM


Output voltage of RSP-1000 can be trimmed between  $40\% \sim 110\%$  of its rated value by the following methods and +S & +V, -S & -V also need to be connected on CN50: (1)Using external voltage source between "Vci"(pin9) and "-S"(pin2) that is shown in Fig5.1

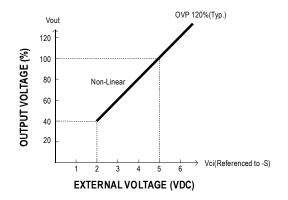


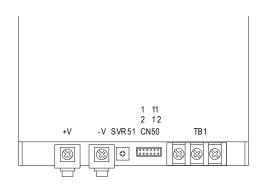


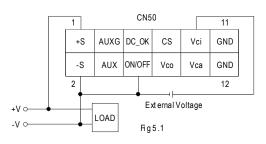


(2) Connecting a resistor externally that in shown in Fig 5.2~&~ Fig 5.3~ (A) O/P voltage goes down

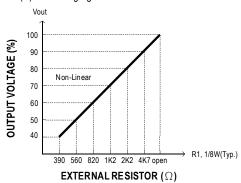

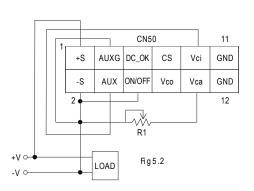

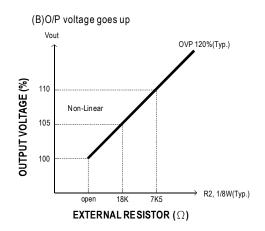

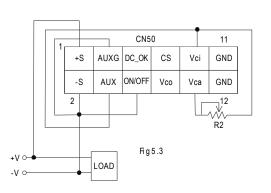




#### 6. Current Sharing with Remote Sensing

RSP-1000 has the built-in active current sharing function and can be connected in parallel to provide higher output power:

- (1) Parallel operation is available by connecting the units shown as below.
  - (+S,-S and CS are connected mutually in parallel).
- $(2) Difference \ of \ output \ voltages \ among \ parallel \ units \ should \ be \ less \ than \ 0.2V.$
- (3) The total output current must not exceed the value determined by the following equation. (output current at parallel operation)=(Rated current per unit)×(Number of unit)×0.9
- (4)In parallel operation 4 units is the maximum, please consult the manufacturer for applications of more connecting in parallel.
- (5) The power supplies should be paralleled using short and large diameter wiring and then connected to the load.

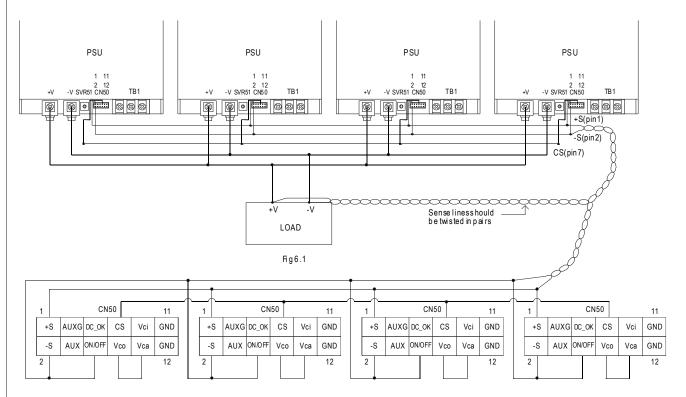

Note: In parallel connection, maybe only one unit (master) operate if the total output load is less than 5% of rated load condition. The other PSUs (slaves) may go into standby mode and their output LEDs will not turn on.